



## Convenience For People with Disabilities

- The Miconic 10 system has features for people with special needs. To activate these features, first press the international symbol for accessibility located on the keypad. Then press the keys for your desired floor.
- The Miconic 10 system will attempt to assign an elevator with fewer passengers to provide more room in the car.
- The Miconic 10 system will provide additional time for a person with disabilities to reach the elevator car.

Audible and visual signals from the keypad will indicate that a car has been assigned to handle the call.

## Introducing the Schindler Miconic 10 elevator traffic management system




The Micronic 10 elevator system is a bit different from standard elevators but it's just as easy to use. The key to the

system is the Micronic 10 keypad, similar to that found on a touch-tone phone. Using it is as easy as 1, 2, 3.

## Step 1

### Press the Pushbuttons For Your Desired Floor

The Micronic 10 keypads are conveniently located in the elevator lobbies of each floor. Each keypad features pushbuttons which you use to register your floor number. To call an elevator car, press the pushbuttons for your desired floor.

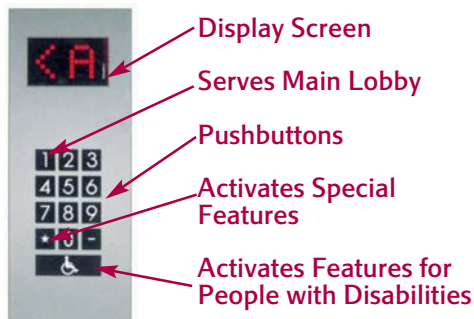

## Step 2

### Read The Elevator Car Assignment

A unique feature of the Micronic 10 system is the display screen on the keypad console. As soon as you press the keys to call an elevator, the display screen will indicate a letter and a symbol. The letter identifies which elevator has been designated by the Micronic 10 computer to take you to your destination, and the symbol tells you the elevators location.




## Step 3


### Walk to Your Elevator and Enjoy the Ride

As soon as the display screen tells you which elevator you've been assigned, walk to that elevator and wait for the doors to open. Enter the car and enjoy the ride!

There are two ways to confirm that you're at the correct elevator: the letter above each car and the stop indicator in the car entrance. The stop indicator flashes to confirm the car will stop at the floor you have chosen and remains illuminated while you travel. It flashes again to signal the approaching stop.

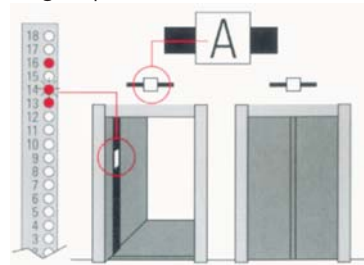

**Our new elevator system  
is as easy to use as 1, 2, 3.**

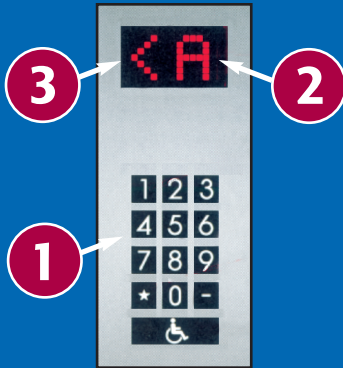

1. Enter floor destination.
2. Look for your car assignment.
3. Proceed to specific elevator.



## **Convenience For People with Disabilities**

- To activate the special needs features, press the international symbol for accessibility located on the keypad. Then press the keys for your desired floor.
- The system will attempt to assign an elevator with fewer passengers and will provide additional time for you to reach the elevator car.
- Both audible and visual signals from the keypad will indicate that a car has been assigned to handle the call.